

EURO TOWERS LTD

MANUFACTURERS OF ALUMINIUM ACCESS EQUIPMENT

MANUFACTURED TO A TUV CERTIFIED ISO 9001 QUALITY CONTROL SYSTEM

MICROFOLD 1000 EXTENSION UNIT

Assembly Instructions

Ensure all parts are present and are not damaged before assembling

COMPRISING OF...

- 1 x MFEX - Microfold Extension unit
- 1 x MFST/L – Microfold left stabilizer
- 1 x MFST/R – Microfold Right stabilizer

THIS EXTENSION WILL ENABLE THE PLATFORM LEVEL TO BE RAISED TO 1.25M OR 1.5M

Always fit stabilizers before accessing the unit

STEP 1

1. Disengage long pin clips and remove Guardrail frames
2. Unbolt the four telescopic tubes and take off the top section.



STEP 2

1. Place the extension into the unit
2. Bolt on the four telescopic tubes
3. Refit the guardrail frames and engage long pin clips



STEP 3

1. Open green gate braces and fit platform to rung
2. Place unit in work position and lock all castors.
3. Raise guardrail to correct height, 1m above the platform and engage long pin clips.
4. Fit stabilizers
5. Enter platform, close green gate braces in their locations ensuring that the brace hooks are fully engaged.
6. Repeat instructions for 1.5m platform level.



GENERAL SAFETY RULES

1. Do not use if the product is damaged or has parts missing
2. Do not use on unstable ground such as loose bricks, boxes or blocks
3. Before use ensure that the castors are fully fitted to the folding frame, tighten if necessary.
4. Remove all personnel and materials before moving the unit.
5. When moving the unit, apply force manually by pushing at the base.
6. Do not over reach and do not move the unit by pulling yourself along whilst on the platform.
7. Do not gain extra height by using boxes, ladders etc on the platform.
8. Access to the unit is only through the green gates, never through the red gates.
9. Ensure that the locking hooks on gates are functioning correctly and are fully engaged.
10. Ensure that the castors are locked before use.
11. Ensure that the long pin clips are properly fitted.
12. If there is an overhead hazard use head protection
13. Never gain entrance to the platform by climbing over the outside of the unit.
14. Do not over load the unit

MAXIMUM SAFE WORKING LOAD FOR PLATFORM / STRUCTURE: 250KG